

ONKYO®

COMPACT DISC PLAYER

C-7070

Instruction Manual

Getting Started.....En-2

Connections En-13

Basic Operation..... En-15

Disc Playback En-16

Various Playback Modes En-21

**iPod / iPhone and USB
Playback** En-24

Setup..... En-27

Miscellaneous En-29

Thank you for purchasing an Onkyo product. Please read this manual carefully before making any connections or using this product. By following these instructions, you'll get the best audio performance and the most listening pleasure from your Onkyo product. Keep this manual for future reference.



WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



WARNING
RISK OF ELECTRIC SHOCK
DO NOT OPEN

AVIS
RISQUE DE CHOC ELECTRIQUE
NE PAS OUVRIR




The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.


PORTABLE CART WARNING
S3125A
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Damage Requiring Service
Unplug the apparatus from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power-supply cord or plug is damaged,
 - B. If liquid has been spilled, or objects have fallen into the apparatus,
 - C. If the apparatus has been exposed to rain or water,
 - D. If the apparatus does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the apparatus to its normal operation,
 - E. If the apparatus has been dropped or damaged in any way, and
 - F. When the apparatus exhibits a distinct change in performance this indicates a need for service.
16. Object and Liquid Entry
Never push objects of any kind into the apparatus through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.
The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases shall be placed on the apparatus.
Don't put candles or other burning objects on top of this unit.
17. Batteries
Always consider the environmental issues and follow local regulations when disposing of batteries.
18. If you install the apparatus in a built-in installation, such as a bookcase or rack, ensure that there is adequate ventilation.
Leave 20 cm (8") of free space at the top and sides and 10 cm (4") at the rear. The rear edge of the shelf or board above the apparatus shall be set 10 cm (4") away from the rear panel or wall, creating a flue-like gap for warm air to escape.

Precautions

1. **Recording Copyright**—Unless it's for personal use only, recording copyrighted material is illegal without the permission of the copyright holder.

2. **AC Fuse**—The AC fuse inside the unit is not user-serviceable. If you cannot turn on the unit, contact your Onkyo dealer.

3. **Care**—Occasionally you should dust the unit all over with a soft cloth. For stubborn stains, use a soft cloth dampened with a weak solution of mild detergent and water. Dry the unit immediately afterwards with a clean cloth. Don't use abrasive cloths, thinners, alcohol, or other chemical solvents, because they may damage the finish or remove the panel lettering.

4. Power

WARNING

BEFORE PLUGGING IN THE UNIT FOR THE FIRST TIME, READ THE FOLLOWING SECTION CAREFULLY

AC outlet voltages vary from country to country. Make sure that the voltage in your area meets the voltage requirements printed on the unit's rear panel (e.g., AC 230 V, 50 Hz or AC 120 V, 60 Hz).

The power cord plug is used to disconnect this unit from the AC power source. Make sure that the plug is readily operable (easily accessible) at all times.

For models with [POWER] button, or with both [POWER] and [ON/STANDBY] buttons:

Pressing the [POWER] button to select OFF mode does not fully disconnect from the mains. If you do not intend to use the unit for an extended period, remove the power cord from the AC outlet.

For models with [ON/STANDBY] button only: Pressing the [ON/STANDBY] button to select Standby mode does not fully disconnect from the mains. If you do not intend to use the unit for an extended period, remove the power cord from the AC outlet.

5. Preventing Hearing Loss

Caution

Excessive sound pressure from earphones and headphones can cause hearing loss.

6. Batteries and Heat Exposure

Warning

Batteries (battery pack or batteries installed) shall not be exposed to excessive heat as sunshine, fire or the like.

7. **Never Touch this Unit with Wet Hands**—Never handle this unit or its power cord while your hands are wet or damp. If water or any other liquid gets inside this unit, have it checked by your Onkyo dealer.

8. Handling Notes

- If you need to transport this unit, use the original packaging to pack it how it was when you originally bought it.
- Do not leave rubber or plastic items on this unit for a long time, because they may leave marks on the case.
- This unit's top and rear panels may get warm after prolonged use. This is normal.

- If you do not use this unit for a long time, it may not work properly the next time you turn it on, so be sure to use it occasionally.
- When you've finished using this unit, remove all discs and turn off the power.

9. Installing this Unit

- Install this unit in a well-ventilated location.
- Ensure that there's adequate ventilation all around this unit, especially if it's installed in an audio rack. If the ventilation is inadequate, the unit may overheat, leading to malfunction.
- Do not expose this unit to direct sunlight or heat sources, because its internal temperature may rise, shortening the life of the optical pickup.
- Avoid damp and dusty places, and places subject to vibrations from loudspeakers. Never put the unit on top of, or directly above a loudspeaker.
- Install this unit horizontally. Never use it on its side or on a sloping surface, because it may cause a malfunction.
- If you install this unit near a TV, radio, or VCR, the picture and sound quality may be affected. If this occurs, move this unit away from the TV, radio, or VCR.

10. Moisture Condensation

Moisture condensation may damage this unit.

Read the following carefully:

Moisture may condense on the lens of the optical pickup, one of the most important parts inside this unit.

- Moisture condensation can occur in the following situations:
 - The unit is moved from a cold place to a warm place.
 - A heater is turned on, or cold air from an air conditioner is hitting the unit.
 - In the summer, when this unit is moved from an air conditioned room to a hot and humid place.
 - The unit is used in a humid place.
- Do not use this unit when there's the possibility of moisture condensation occurring. Doing so may damage your discs and certain parts inside this unit.

If condensation does occur, unplug the power cord and leave the unit for two to three hours in the room temperature.

This unit contains a semiconductor laser system and is classified as a "CLASS 1 LASER PRODUCT". So, to use this model properly, read this Instruction Manual carefully. In case of any trouble, please contact the store where you purchased the unit.

To prevent being exposed to the laser beam, do not try to open the enclosure.

CAUTION:

CLASS 1M VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS. THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

Precautions—Continued

The label on the right is applied on the rear panel.



1. This unit is a CLASS 1 LASER PRODUCT and employs a laser inside the cabinet.
2. To prevent the laser from being exposed, do not remove the cover. Refer servicing to qualified personnel.

For U.S. models

FCC Information for User

CAUTION:

The user changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For Canadian Models

NOTE: THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

For models having a power cord with a polarized plug:

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Modèle pour les Canadien

REMARQUE: CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Sur les modèles dont la fiche est polarisée:

ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

For British models

Replacement and mounting of an AC plug on the power supply cord of this unit should be performed only by qualified service personnel.

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Blue: Neutral

Brown: Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

IMPORTANT

The plug is fitted with an appropriate fuse. If the fuse needs to be replaced, the replacement fuse must be approved by ASTA or BSI to BS1362 and have the same ampere rating as that indicated on the plug. Check for the ASTA mark or the BSI mark on the body of the fuse.

If the power cord's plug is not suitable for your socket outlets, cut it off and fit a suitable plug. Fit a suitable fuse in the plug.

For European Models

Declaration of Conformity

We, ONKYO EUROPE
ELECTRONICS GmbH
LIEGNITZERSTRASSE 6,
82194 GROEBENZELL,
GERMANY




declare in own responsibility, that the ONKYO product described in this instruction manual is in compliance with the corresponding technical standards such as EN60065, EN55013, EN55020 and EN61000-3-2, -3-3.

GROEBENZELL, GERMANY 
K. MIYAGI


ONKYO EUROPE ELECTRONICS GmbH

Supplied Accessories

Make sure you have the following accessories.

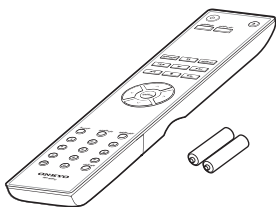

 
Remote controller RC-828C and two batteries (R03/AAA)



Audio cable (80 cm)



RI cable (80 cm)

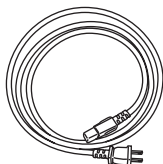

Power cord (1.8 m)

• To use **RI**, the CD Player must be connected with a **RI** cable.

* In catalogs and on packaging, the letter at the end of the product name indicates the color. Specifications and operations are the same regardless of color.

Features

- DIDRC^{*1} (Dynamic Intermodulation Distortion Reduction Circuit)
- Aluminum die-casting tray with silent mechanism
- 1.6 mm thick anti-vibration full flat chassis
- Solid aluminum front panel
- Massive Power Transformer
- Wolfson 192 kHz/24-Bit D/A Converter
- Audiophile-Grade Capacitors
- Optical and Coaxial Digital Output
- Digital Output Off function
- Digital Filter Select function
- Plays Audio CDs, MP3/WMA CDs, CD-R/RWs
- iPod/iPhone digital connection via USB
- Quick Navigation for MP3/WMA CD Playback
- 2 Repeat Modes (Track/Full)
- 25 Track Programming
- RI-Compatible Remote Control

- 3-Mode Dimmer
- Headphones output jack (ø 6.3 mm 1/4 inch)
- Auto standby function

iPod/iPhone

Compatible iPod/iPhone^{*2} models

Made for:

- iPod touch (1st, 2nd, 3rd and 4th generation)
- iPod classic
- iPod (5th generation)
- iPod nano (1st, 2nd, 3rd, 4th, 5th and 6th generation)
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

USB Interface

* About FAT

- Supports FAT16 and 32.
- Supports up to 499 files per folder.
- Supports up to 499 folders.

* MP3 decoder

- Supports MPEG Audio 1, 2 and 2.5.
- Supports Layer 1, 2 and 3.
- Supports sample rates 8 k, 16 k, 32 k, 11.025 k, 22.05 k, 44.1 k, 12 k, 24 k and 48 kHz.
- Supports bit rates 8 to 320 kbps and VBR (Variable Bit Rate).

* WMA^{*3} decoder

- Supports WMA Ver. 9 standard.
- Does not support DRM.
- Supports sample rates 8 k, 16 k, 32 k, 11.025 k, 22.05 k, 44.1 k, 12 k, 24 k and 48 kHz.
- Supports bit rates 5 to 384 kbps and VBR (Variable Bit Rate).

* AAC decoder

- Supports MPEG4 AAC-LC encoded by iTunes.
- Does not support DRM.
- Supports sample rates 8 k, 16 k, 32 k, 11.025 k, 22.05 k, 44.1 k, 12 k, 24 k and 48 kHz.
- Supports bit rates 8 to 320 kbps and VBR (Variable Bit Rate).

*1 DIDRC and the DIDRC logo are registered trademarks of Onkyo Corporation.

*2 iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

“Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with iPod or iPhone may affect wireless performance.


*3 Windows Media is a registered trademark or trademark of Microsoft Corporation in the United States and/or in other countries.

Contents

Important Safety Instructions	2
Precautions	3
Supplied Accessories	5
Features	5
Getting to Know the CD Player	7
Front Panel.....	7
Display.....	8
Rear Panel.....	8
Remote Controller.....	9
Installing the Batteries.....	10
Aiming the Remote Controller.....	10
Disc Notes	11
Connecting the CD Player	13
Audio Connections.....	13
RI Connections.....	14
Connecting the Power Cord	14
Basic Operation	15
Turning On CD Player.....	15
Setting Auto Standby (ASb).....	15
Changing the Display Brightness.....	15
Using Headphones.....	15
Disc Playback	16
Using the Remote Controller.....	17
Displaying CD Information.....	17
Selecting Files (MP3/WMA CDs).....	18
Selecting Files in Navigation Mode.....	18
Selecting Files in All Folder Mode.....	19
Selecting a Folder during Playback (Search Mode).....	19
Displaying MP3/WMA Information.....	20
Various Playback Modes	21
Random Playback.....	21
Memory Playback (For Audio CDs).....	21
Memory Playback (For MP3/WMA CDs).....	22
Repeat Playback.....	23
iPod / iPhone Playback	24
Playing iPod/iPhone.....	24
USB Playback	25
Random Playback.....	26
Select the Type of Repeat Playback.....	26
Displaying MP3/WMA/AAC Information.....	26
Setup	27
Setup Procedure.....	27
Common Settings.....	27
Setting MP3/WMA Preference.....	28
Troubleshooting	29
Specifications	31

Getting to Know the CD Player


Front Panel

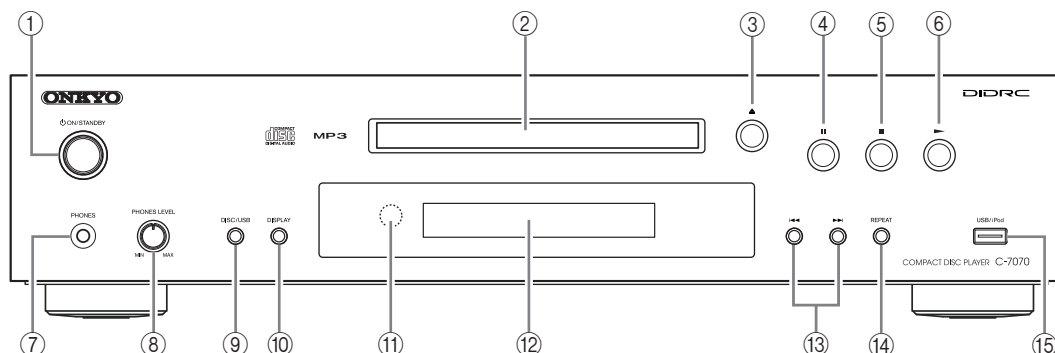

- ① **ON/STANDBY button (→15)**
Press to turn on or standby the C-7070.
- ② **Disc tray (→16)**
The CD is loaded here.
- ③ **Open/Close [▲] button (→16)**
Press to open and close the disc tray.
- ④ **Pause [||] button (→16)**
Press to pause playback.
- ⑤ **Stop [■] button (→16, 18, 19, 27)**
Press to stop playback.
- ⑥ **Play [▶] button (→16, 18, 19, 21, 22)**
Press to start playback.
- ⑦ **PHONES jack (→15)**
This is a standard stereo jack for connecting stereo headphones.
- ⑧ **PHONES LEVEL knob (→15)**
Use to control the phones level.
Turn the knob clockwise to increase the phones level and counterclockwise to decrease it.
- ⑨ **DISC/USB button (→24, 25)**
Press this button to select CD or USB.
- ⑩ **DISPLAY button (→17, 20, 21)**
Press to change the displayed information.
- ⑪ **Remote control sensor (→10)**
Receives control signals from the remote controller.
- ⑫ **Display (→8)**
See next page.
- ⑬ **[◀◀]/[▶▶] buttons (→16, 19, 21)**
Press to select the previous or next track.
Hold down the buttons to fast-reverse or fast-forward during playback.
- ⑭ **REPEAT button (→23)**
Press to set the repeat playback or 1-repeat playback mode.
- ⑮ **USB port (→24, 25)**
Connect an iPod/iPhone or USB flash drive to this port.

Getting to Know the CD Player—Continued

Display

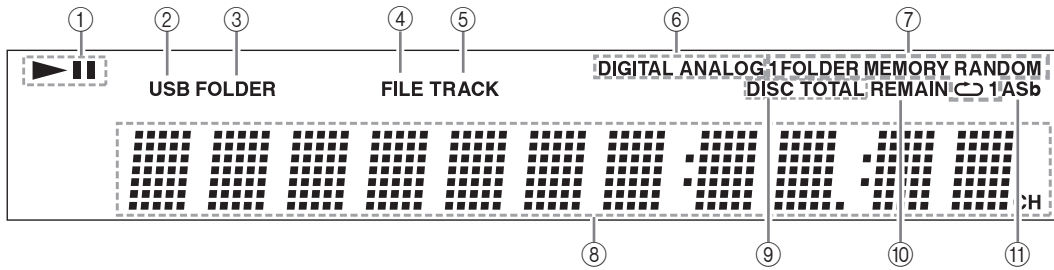

① ▶ / || indicators

The ▶ indicator lights up for playback.
The || indicator lights up while playback is paused.

② USB indicator

Lights up when the USB port is selected.

③ FOLDER indicator

Lights up when folder playback is selected.

④ FILE indicator

Lights up when an MP3 or WMA file number is being displayed.

⑤ TRACK indicator

Lights up when a CD track number is being displayed.

⑥ DIGITAL/ANALOG indicator

⑦ Playback mode indicators

1 FOLDER lights up when repeat playback is selected for 1 folder.

MEMORY lights up when memory playback is selected.

RANDOM lights up when random playback is selected.

↻ lights up when repeat playback is selected for all tracks.

↻1 lights up when repeat playback is selected for one track.

⑧ Message area

Various information is displayed here.

⑨ DISC, TOTAL indicators


These indicators light up when the total disc time or track time is being displayed.

⑩ REMAIN indicator

This indicator lights up when the remaining disc time or track time is being displayed.

⑪ Auto Standby (ASb) indicator

Rear Panel

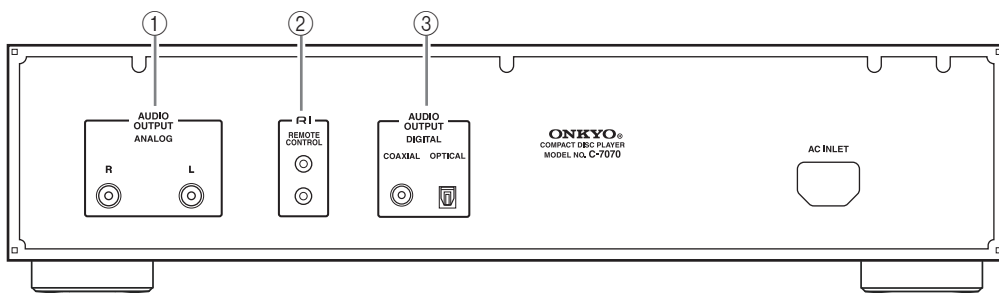

① ANALOG AUDIO OUTPUT jacks (→13, 14)

These analog audio outputs can be connected to an amplifier's analog inputs by using the supplied audio cable.

② RI REMOTE CONTROL jacks (→14)


These two identical **RI** (Remote Interactive) jacks can be connected to the **RI** jacks on your other Onkyo components for interactive control.

③ DIGITAL AUDIO OUTPUT OPTICAL/COAXIAL jacks (→13, 14)

These two digital audio outputs can be connected to a digital audio input on an amplifier or recorder.

Remote Controller

The page numbers in parentheses show where you can find the main explanation for each item.

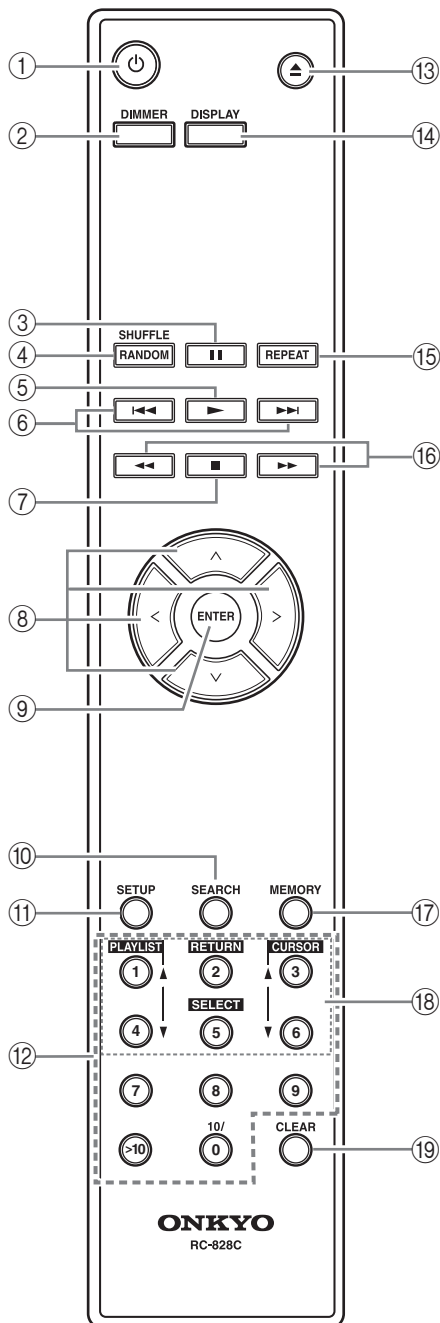


- ① **[⏻] button (→15)**
Press to turn on or standby the C-7070.
- ② **DIMMER button (→15)**
Press to adjust the display brightness.
- ③ **Pause [||] button (→16, 17)**
Press to pause playback.

- ④ **RANDOM button (→21, 24)**
Select the Random playback mode.
- ⑤ **Play [▶] button (→16 – 19, 21, 22, 24)**
Press to start playback.
- ⑥ **[◀◀]/[▶▶] buttons (→16, 17, 19, 21, 24)**
Press to select the previous or next track.
- ⑦ **Stop [■] button (→16 – 19, 27)**
Press to stop playback.
- ⑧ **^/∨/</> buttons (→15, 19, 21, 22, 27)**
Press the Arrow buttons to configure various settings, and then press the ENTER button to set them.
These buttons can be also used to select a track.
- ⑨ **ENTER button (→15, 19, 21 – 27)**
Press to set a selected preference.
- ⑩ **SEARCH button (→19)**
For MP3, WMA CDs, this button is used to search and select a file number or a folder number.
- ⑪ **SETUP button (→15, 27)**
Press to access various settings.
- ⑫ **Number buttons (→17, 19)**
Use to enter track numbers.
- ⑬ **Open/Close [▲] button (→16)**
Press to open and close the disc tray.
- ⑭ **DISPLAY button (→17, 20, 24, 25)**
Press to change the displayed information.
- ⑮ **REPEAT button (→23, 24)**
Select the repeat playback or 1-repeat playback mode.
- ⑯ **[◀◀]/[▶▶] buttons (→17, 21, 24)**
Hold down to fast-reverse or fast-forward during playback.
- ⑰ **MEMORY button (→21, 22)**
Select the Memory playback mode.
- ⑱ **iPod/iPhone control buttons (→24)**
Use these to select a function on the iPod/iPhone.
- ⑲ **CLEAR button (→21)**
Use to clear any numbers that have been entered during numeric input. When making a memory setting, the selected track is erased.


Installing the Batteries

- 1 To open the battery compartment, press the small hollow and slide open the cover.**

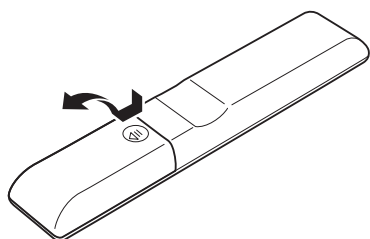


- 2 Insert two batteries (R03/AAA) into the compartment.**

Carefully follow the polarity diagram (positive (+) and negative (-) symbols) inside the battery compartment.

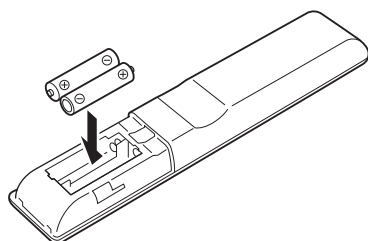

- 3 Replace the cover and slide it shut.**

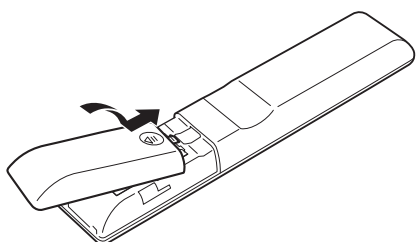


Notes:

- If the remote controller doesn't work reliably, try replacing the batteries.
- Don't mix new and old batteries or different types of batteries.
- If you intend not to use the remote controller for a long time, remove the batteries to prevent damage from leakage or corrosion.
- Expired batteries should be removed as soon as possible to prevent damage from leakage or corrosion.

Aiming the Remote Controller

When you operate the remote controller, point it at the CD Player's remote control sensor, as shown below.

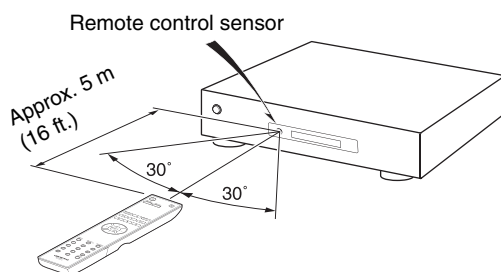

Notes:

- The remote controller may not work reliably if the CD Player is subjected to bright light, such as direct sunlight or inverter-type fluorescent lights. Keep this in mind when installing.
- If another remote controller of the same type is used in the same room, or the CD Player is installed close to equipment that uses infrared rays, the remote controller may not work reliably.
- Don't put anything, such as a book, on the remote controller because the buttons may be pressed inadvertently, thereby draining the batteries.
- The remote controller may not work reliably if the CD Player is installed in a rack behind colored glass doors. Keep this in mind when installing.
- The remote controller will not work if there's an obstacle between it and CD Player's remote control sensor.

Disc Notes

Precautions for Playback

Compact discs (CDs) with the following logo on the label surface can be used.

Do not use discs designed for purposes other than audio, such as CD-ROMs for PC use. Abnormal noise could damage the speakers or amplifier.



- * This CD player supports CD-R and CD-RW discs. Note that some discs may not play back because of the disc characteristics, scratches, contamination or the recording state. A disc recorded with an audio CD recorder will not play back unless it is finalized.

Never use discs which have an unusual shape (such as hearts or octagons). These types of discs could jam and damage the CD player.



CD Playback with Copy-control Function

Some audio CDs with copy-control functionality do not comply with official CD standards. These are special discs and cannot be played with this CD player.

Playback of MP3 and WMA Discs

MP3 and WMA files recorded on a CD-R/CD-RW can be played with this CD player.

- Use discs which have been recorded following the ISO9660 Level 2 file system. (The supported directory depth is eight levels, the same as ISO9660 Level 1)
- Discs recorded with the hierarchical file system (HFS) cannot be played.
- Up to 99 folders (including the root folder), and up to 499 files (including root) and files can be recognized and played.

Notes:

- A disc recorded with a recorder or personal computer may not play in some cases. (Cause: Disc's characteristics, damaged or dirty disc, dirt on player's lens, dew condensation, etc.)
- A disc recorded on a personal computer may not play because of the application settings or environment. Record the disc with the proper format. (Contact the application maker for details.)
- A disc with insufficient storage capacity may not play back properly.

Playback of MP3 Discs

- Only MP3 files with the extension “.MP3” or “.mp3” are supported.
- This CD player supports files recorded in MPEG 1 Audio Layer 3 (32-320kbps), with a sampling frequency of 32/44.1/48 kHz.
- Variable bitrates (VBR) between 32kbps and 320kbps are supported. The time information during VBR playback may not display correctly.

Playback of WMA Discs


- WMA stands for “Windows Media[®] Audio”, an audio compression technology developed by Microsoft Corporation USA.
- Only WMA files with the extension “.WMA” or “.wma” are supported.
- Encode the WMA file with an application approved by Microsoft Corporation USA. The file may not play back correctly if encoded with an unapproved application.
- Variable bitrates (VBR) between 32kbps and 192kbps (32/44.1/48 kHz) are supported.
- Copyright-protected WMA files cannot be played back.
- WMA Pro, Lossless and Voice are not supported.

- * Windows Media is a registered trademark or trademark of Microsoft Corporation in the United States and/or in other countries.

Handling Discs

Hold discs by the edge, or by the center hole and edge. Avoid touching the playback surface (surface with nothing printed on it).

Label surface
(printed surface)

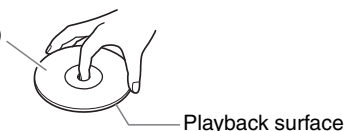

Do not attach paper or stickers, or write on the playback or label surface of the disc. Take care not to scratch or damage the disc.

Precautions for Rental Discs

Do not use discs with residue from cellophane tape, rental discs with labels which are peeling off, or discs with decorative labels. This type of disc could get stuck in the CD player, or could damage the CD player.

Precautions for Inkjet Printable Discs


Do not leave a CD-R/CD-RW having a label printed with an inkjet printer in the CD player for a long time. The disc could get stuck in the CD player, or could damage the CD player.

Remove the disc from the CD player when not being played, and store it in a case. A freshly printed disc will stick easily, and should not be played immediately.

Caring for Discs

If the disc is dirty, the C-7070 will have a hard time reading signals, and the audio quality may drop. If the disc is dirty, gently wipe off fingerprints and dust with a soft cloth. Lightly wipe from the center outwards.

To remove stubborn dust or dirt, wipe the disc with a soft cloth dampened with water, and then dry it with a dry cloth. Do not use cleaning spray for analog records or antistatic agents, etc. Never use volatile chemicals such as benzine or paint thinner as they can impregnate the disc surface.

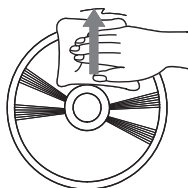


Connecting the CD Player

Audio Connections


- Before making any connections, read the manuals supplied with your other components.
- Don't connect the power cord until you've completed and double-checked all connections.

Connection Color Coding

 RCA-type audio connections are usually color-coded: red and white. Use red plugs to connect right-channel audio inputs and outputs (typically labeled "R"). Use white plugs to connect left-channel audio inputs and outputs (typically labeled "L").



- Push plugs in all the way to make good connections (loose connections can cause noise or malfunctions).
- To prevent interference, keep audio cables away from power cords and speaker cables.

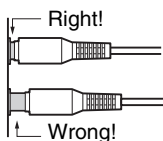


Optical/Coaxial Digital Jack

The C-7070's optical digital jack has a shutter-type cover that opens when an optical plug is inserted and closes when it's removed. Push the plug in all the way.

Caution: To avoid damaging the shutter, hold the optical plug straight when inserting and removing.

Note:

- Do not put anything on top of the C-7070, as it may interfere with proper ventilation.

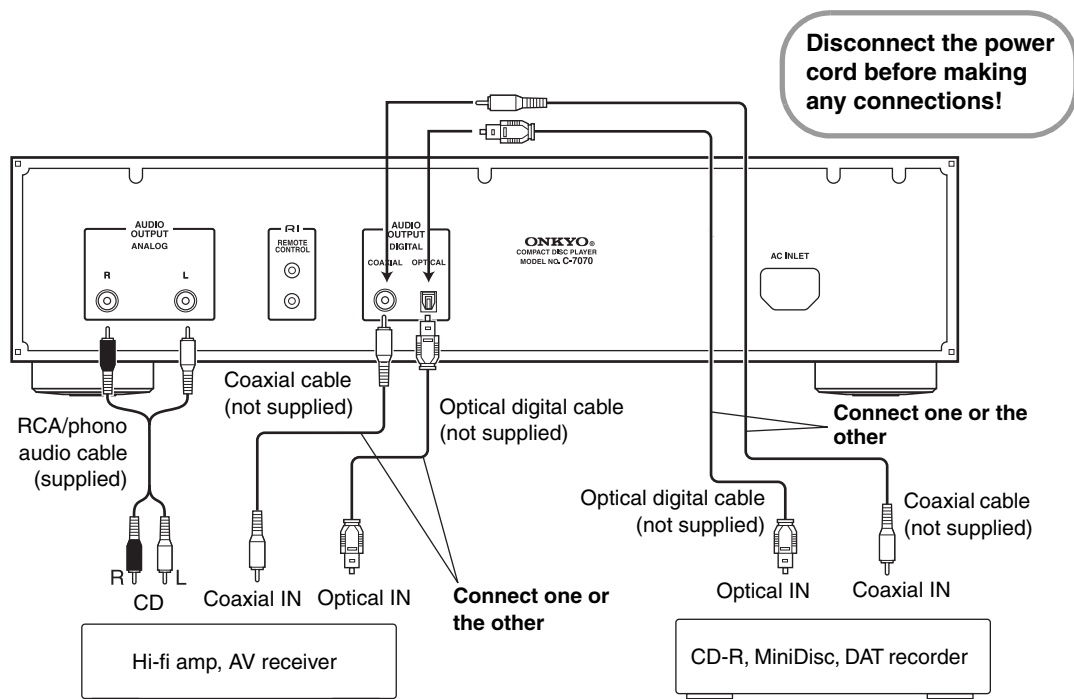

Connecting the CD Player—Continued

RI Connections

With **RI** (Remote Interactive) you can control the C-7070 together with your other **RI**-compatible Onkyo AV components. With some Onkyo AV receivers you can use one remote controller to control all your Onkyo components and use the following special **RI** functions:

Direct Change

If your C-7070 is connected to an **RI**-compatible Onkyo hi-fi amp or AV receiver, when you start playback on the C-7070, the AV receiver will select the C-7070 as the input source.

Remote Control Operation


You can control the C-7070 by using your Onkyo amplifier's remote controller. See the amplifier's instruction manual for details.

To use the **RI** functions, you need to connect one of the C-7070's **RI** connectors to an **RI** connector on another AV component in your system by using the supplied **RI** cable.

See the manuals supplied with your other **RI**-compatible AV components for more information.

Notes:


- Use only **RI** cables for **RI** connections.
- The C-7070 has two **RI** connectors. You can connect either one to your Onkyo hi-fi amp or AV receiver. The other connector is for connecting additional **RI**-compatible components.
- Connect the C-7070's **RI** connector only to Onkyo AV components. Connecting to other manufacturer's AV components may cause them to malfunction.
- Some Onkyo **RI**-compatible AV components may not support the special functions described here.

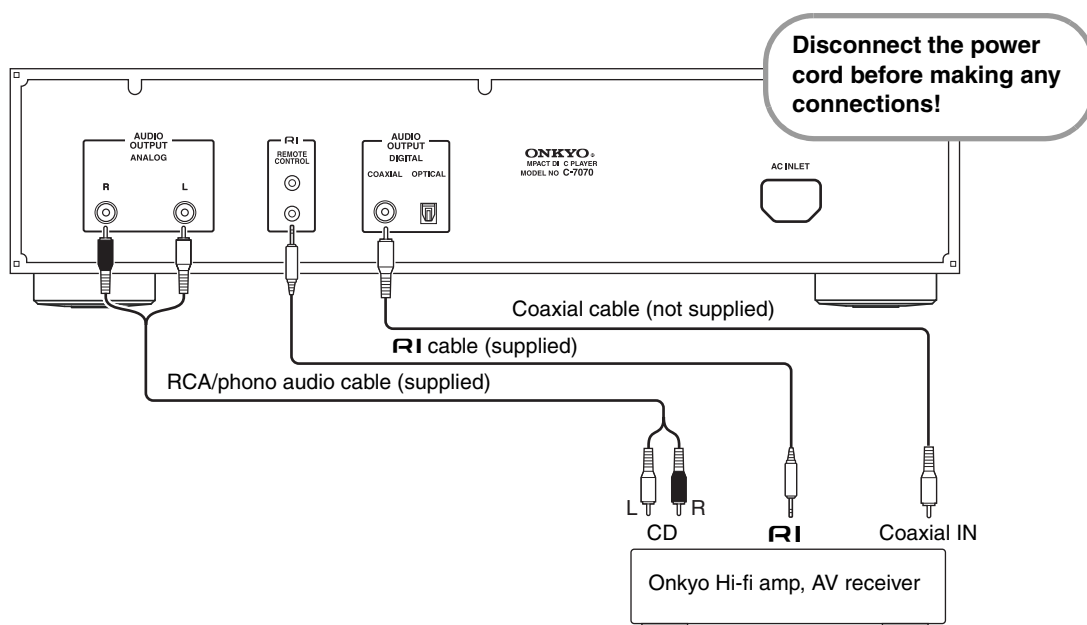

Connecting the Power Cord




Before connecting the power cord, connect all of the other components.

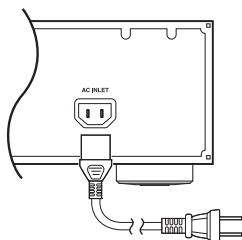

Plug the power cord into a suitable electrical outlet. (Connector type varies by country)


Basic Operation

Turning On CD Player

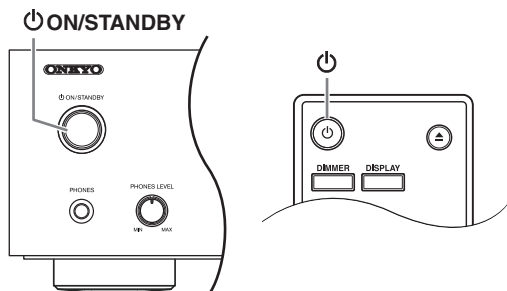

To turn on the CD Player, press the [ON/STANDBY] button on the unit or the remote controller. Press the [ON/STANDBY] button again to set the CD Player to Standby.

Setting Auto Standby (ASb)

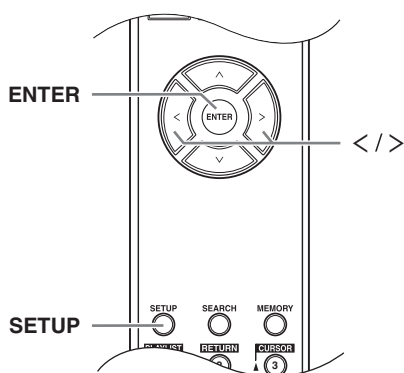

You can specify that if the CD Player is left stopped for 30 minutes, the power will automatically turn off, placing the unit in Standby mode (Auto Standby function).

On the North American model:

The default setting is “Off”.

On the European model:

The default setting is “On”.

Make settings for this function while playback is stopped.

- 1 Press the [SETUP] button.**
- 2 Use the [<] or [>] button to display “ASb”; then press the [ENTER] button.**
- 3 Use the [<] or [>] button to switch “Off” or “On”; then press the [ENTER] button.**
- 4 “COMPLETE” appears on the display.**
If this setting is “On,” the ASb indicator will be lit.

Notes:

- If an iPod/iPhone is connected, ASb will not operate because the connected unit is being charged.
- If playback is paused, the power will remain on even after 30 minutes have elapsed; the Auto Standby function will not operate.
- If Auto Standby is “On,” the “ASb” indicator will blink approximately 30 seconds before Auto Standby operation occurs.

Changing the Display Brightness


Press the remote controller’s [DIMMER] button repeatedly to select the following options:





Using Headphones

Turn down the volume, then connect your stereo headphones (ø 6.3 mm, 1/4 inch phone plug) to the [PHONES] jack.

You can adjust the volume by using the [PHONES LEVEL] knob.

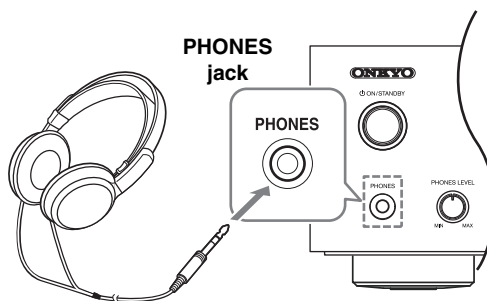

Disc Playback

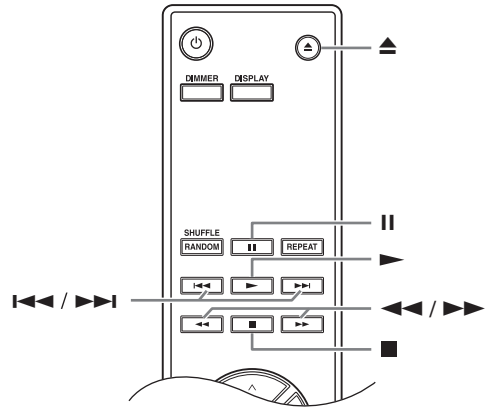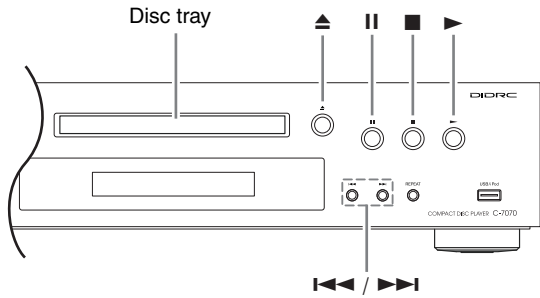


- 1** Press the Open/Close [▲] button to open the disc tray.
- 2** Place the CD on the tray with the label-side facing up.
If you're playing an 8 cm CD, place it in the center of the tray.
- 3** To start playback, press the Play [▶] button.
The disc tray closes and playback starts.


The contents of the disc are displayed when you use the Open/Close [▲] button to load a disc and when you press the Stop [■] button during playback.

Example displays:

- **Audio CD**

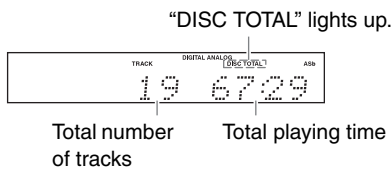

- **MP3/WMA Discs**

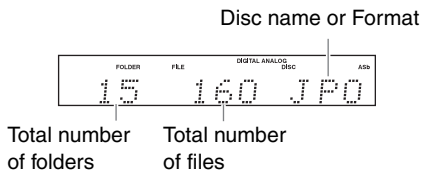

Selecting Tracks

To return to the beginning of the track that's currently playing or paused, press the Previous [◀◀] button. Press the Previous [◀◀] button repeatedly to select earlier tracks.

Press the Next [▶▶] button repeatedly to select subsequent tracks.

- **To Fast-Forward or Fast-Reverse**

During playback or while playback is paused, hold down the [▶▶] button on the CD Player to fast-forward or the [◀◀] button on the CD Player to fast-reverse.

If you use the remote controller, use the [◀◀]/[▶▶] buttons.

On MP3/WMA CDs, fast-reverse only works within the MP3/WMA file that's currently playing.

- **To Pause Playback**

Press the Pause [||] button. The Pause [||] indicator appears.

To resume playback, press the Play [▶] or Pause [||] button again.

- **To Stop Playback**

Press the Stop [■] button.

- **To Eject the CD**

Press the Open/Close [▲] button to open the disc tray.

Note:

- **MP3/WMA CDs -**

If you press the [◀◀] button during playback or while playback is paused, the beginning of the current file is selected.

If you select a file while playback is stopped, press the Play [▶] button to start playback.

You can select MP3/WMA files in other folders by using the [◀◀]/[▶▶] buttons.

Using the Remote Controller

[II]
Press to pause playback

[▶]
Press to start playback

[◀◀]/[▶▶]
Press to select tracks

- Press the Previous [◀◀] button to locate the beginning of the currently playing or paused track. Press it repeatedly to select earlier tracks.
- Press the Next [▶▶] button repeatedly to select subsequent tracks.

For MP3/WMA files, you can select files in other folders.

[■]
Press to stop playback

[DISPLAY]
Press repeatedly to display CD information
See below for details.

[◀◀]/[▶▶]
Press to fast-forward or fast-reverse

During playback or while playback is paused, press and hold the Fast Forward [▶▶] button to fast-forward, or the Fast Reverse [◀◀] button to fast-reverse.

Use the number buttons as shown in the examples below to select tracks.

To select: Press:

Track #8 8

Track #10 0 / <-10 1 0

Track #34 <-10 3 4

⓪ Used to enter numbers over 9.


With MP3/WMA CDs, you can select files in the current folder using these buttons.

Displaying CD Information

Press the CD Player's or the remote controller's [DISPLAY] button (repeatedly) to show the following CD information.



While Playback is Stopped

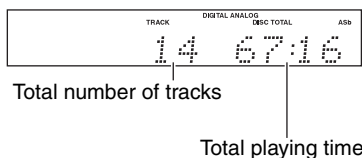

During Playback or While Playback is Paused

TRACK DIGITAL ANALOG ASB No indicator

1 01:3

The elapsed time is normally displayed.

TRACK DIGITAL ANALOG REMAIN ASB "REMAIN"

1 14:38

Lights up while the remaining track time is being displayed.

TRACK DIGITAL ANALOG TOTAL REMAIN ASB "TOTAL REMAIN"

1 67:03


Lights up while the remaining disc time is being displayed.
If the total time is more than 99 minutes and 59 seconds, "--:--" is displayed.

See page 20 for details on displaying MP3/WMA information.

Selecting Files (MP3/WMA CDs)

For MP3/WMA CDs, files (MP3/WMA files) may be organized in a hierarchy, with folders containing files and subfolders, as shown below.

- In this manual, MP3/WMA files are referred to as **files**. Likewise, folders (directories) are referred to as **folders**.

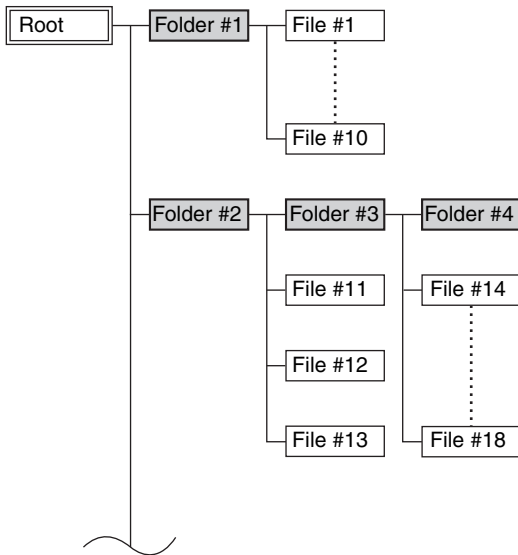

If you don't select a specific MP3/WMA file or folder for playback, all of the MP3/WMA files on the CD will be played in numerical order starting with file #1.

On this CD Player, there are two modes for selecting files (MP3/WMA files): *Navigation mode and All Folder mode*.

In Navigation mode, you can select files (MP3/WMA files) by navigating through the folder hierarchy, moving in and out of folders and subfolders.


In All Folder mode, all folders appear at the same level, making it easy to select folders regardless of the hierarchy.

While playback is stopped, press the remote controller's [■] or [∨] button to enter Navigation mode, the [||] or [∧] button to enter All Folder mode. If you use the CD Player's button, press the [■] button to enter Navigation mode, press and hold the [■] button to enter All Folder mode.

You can change the way in which these buttons change the playback mode. This lets you disable the file selection methods described in Navigation mode or All Folder mode. (See "STOP KEY" in "Setting MP3/WMA Preferences" on page 28.)

Selecting Files in Navigation Mode

In Navigation mode, you can select files by navigating through the folder hierarchy. This mode can only be used while playback is stopped.

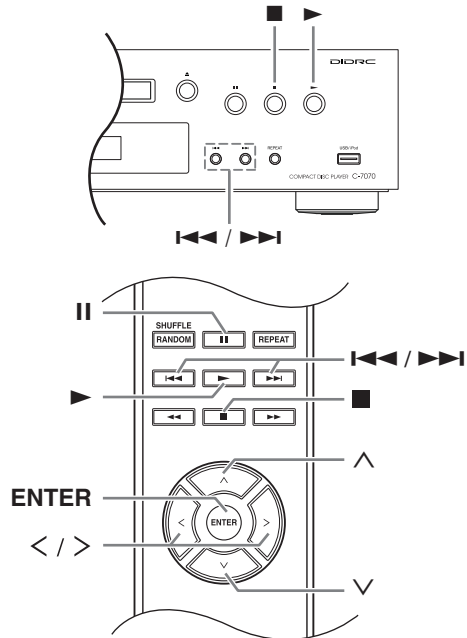

- 1 While playback is stopped, press the [∨] or [■] button.**

The compact disc player enters Navigation mode and "[ROOT]" appears on the display.



- 2 Press the [∨] or [ENTER] button (front panel: [▶]).**

The first folder name in ROOT appears on the display.

If the disc contains no folders, the first file name appears.

- 3 Use the [◀/▶] or [◀◀/▶▶] buttons to select other folders and files at the same level.**

To move up a level, press the [∧] or [||] button (front panel: [■]).

Folders that don't contain files or subfolders can't be selected.

- 4 Press the [ENTER] or [∨] button to move down a level (front panel: [▶]).**

- 5 Use the [◀/▶] or [◀◀/▶▶] buttons to select a file in the folder.**

6 Press the [ENTER] or [▶] button.

Playback will start with the specified file or folder and continue until all of the files on the disc have been played.


To cancel the procedure at any point, press the [■] on the remote controller.

Note:

- The behavior of the [■] on the CD Player can be set from “STOP KEY” preference (page 28).


Selecting Files in All Folder Mode

In All Folder mode, you don't have to navigate the folder hierarchy because all folders that contain files appear at the same level. This mode can only be used while playback is stopped.

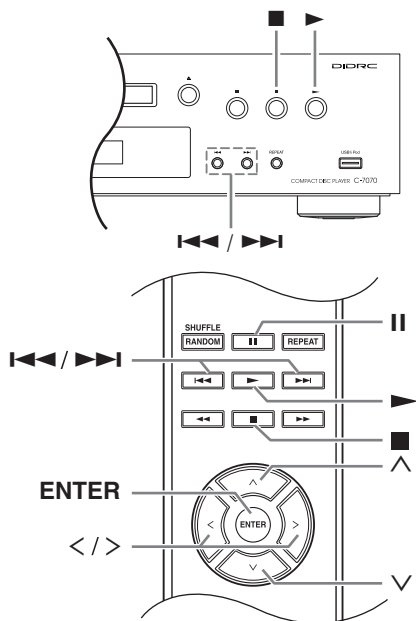

1 While playback is stopped, press the [^] or [II] button (front panel: press and hold the [■]).

 The CD Player enters All Folder mode, and “1” appears on the display.



2 Use the [</>] or [I<<</>>>I] buttons to select the other folders.

You can select any folder that contains files.

3 Press the [∨] button (front panel: [▶]).

The first file name inside the folder appears.

Use the [</>] or [I<<</>>>I] buttons to select the files within the folder.

To select another folder, press the [II] button again (front panel: [■]), and then use the [I<<</>>>I] buttons to select it.

4 Press the [ENTER] or [▶] button to start playback.

Playback will start with the specified file or folder and continue until all of the file on the disc have been played.

To cancel the procedure at any point, press the [■].

■ To Select Folders and Files by Number

- Use the number buttons as shown in the examples below to enter folder/file numbers.

To select:	Press:
Folder/File #8	8
Folder/File #10	0 / >10 1 0
Folder/File #34	>10 3 4


⊙>10 Used to enter numbers over 9.

- Playback starts. When you enter folder number, playback will start from the first file in the selected folder. If a folder contains more than 99 files, single and double-digit file numbers must be preceded by zeros. For example, to specify file #8, press >10, 0, 0, and 8. To specify file #34, press >10, 0, 3, and 4. To specify file #134, press >10, 1, 3, and 4.

Note:

- The behavior of [■] on the CD Player can be set from “STOP KEY” preference (page 28).

Selecting a Folder during Playback (Search Mode)

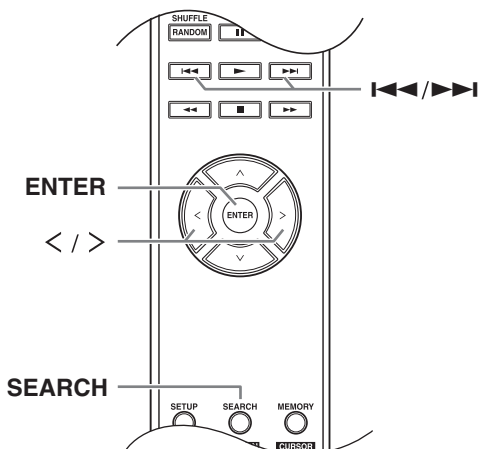

1 Press the [SEARCH] button.

The display blinks.

Disc Playback—Continued

2 To select the previous folder, press the Previous [**<**] button.
To select the next folder, press the Next [**>**] button.

3 Press the [**ENTER**] button to display the file name, and start playback the selected file.

4 Use the Previous [**⏮**] and Next [**⏭**] buttons to select the previous or next file, and start playback.

Note:

- The [**SEARCH**] button cannot be used during “Random Playback” or “Memory Playback”.

Displaying MP3/WMA Information

On the unit

DISPLAY



Remote controller

 
DISPLAY




You can display various information about the MP3/WMA file currently playing, including ID3 tags such as title name, artist name, and album name.

During playback, press the [DISPLAY**] button repeatedly to display the following MP3/WMA information.**

Elapsed file time: The length of time that the current file has been playing (default display). If the elapsed time is more than 99 minutes and 59 seconds, “--:--” is displayed.




File name: Name of the current file.

 

Folder name: Name of the current folder.



 
Title: Title of the current file (if ID3 tag is present).
When there is no ID3 tag, “TITLE-NO DATA” appears.




Artist name: Name of the artist (if ID3 tag is present).
When there is no ID3 tag, “ARTIST-NO DATA” appears.



 Album name: Name of the album (if ID3 tag is present).
When there is no ID3 tag, “ALBUM-NO DATA” appears.



 Sampling rate and bit rate: Sampling rate and bit rate of the current file.



Note:

- To display the disc name, press the [**DISPLAY**] button while playback is stopped. Alternatively, you can set the CD Player so that names containing such characters are displayed as “FILE n” or “FOLDER n,” “n” being the file or folder number (see “BAD NAME” on page 28).


Various Playback Modes

You can select the following playback modes:

- Random playback
- Memory playback
- Repeat playback

Random Playback


With random playback, all of the files on the disc are played in random order.

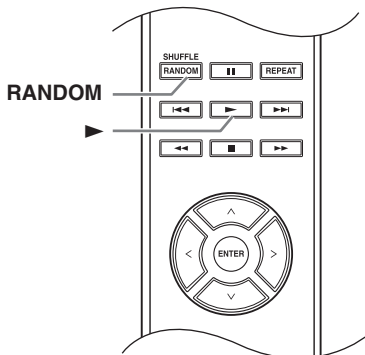

- 1 While playback is stopped, press the [RANDOM] button; the RANDOM indicator appears.



 - 2 To start random playback, press the Play [▶] button.




■ To Cancel Random Playback

- Stop playback, then press the [RANDOM] button to change the playback mode. The RANDOM indicator disappears, and random playback is cancelled.
- Random playback is cancelled when the disc is ejected.


Memory Playback (For Audio CDs)

In memory playback, you can create a playlist of up to 25 files.

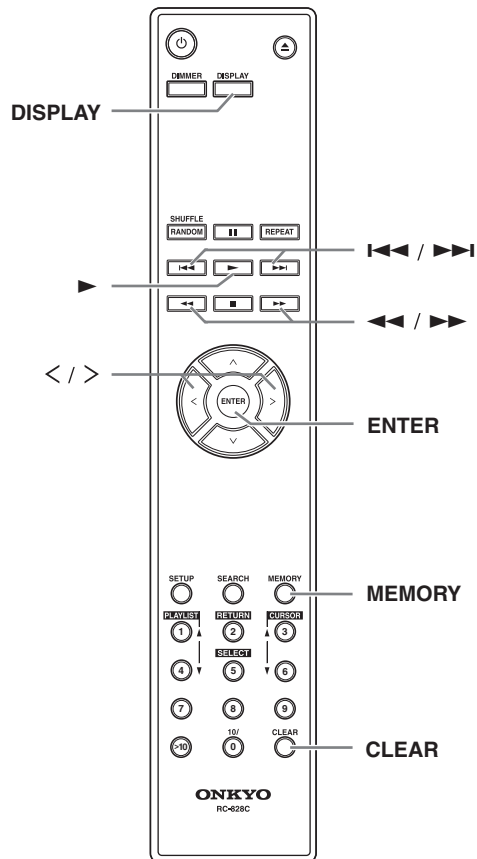


Memory playback can be set only when playback is stopped.

- 1 Press the [MEMORY] button; the MEMORY indicator appears.

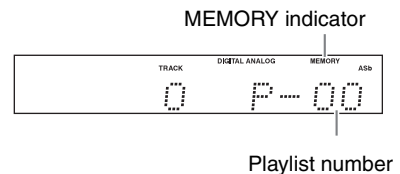

- 2 Use the Previous and Next [\langle]/[\rangle] buttons to select the first file you want to add to the playlist, and then press [ENTER] button.**

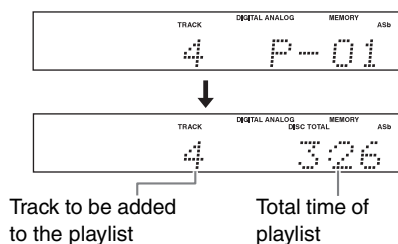


Repeat this step to add additional files to the playlist. Alternatively, you can use the number buttons on the remote controller to select files instead of the Previous and Next [\langle]/[\rangle] and the [ENTER] buttons.

Notes:

- If the total playing time is more than 99 minutes and 59 seconds, “--:--” appears.
- You can add up to 25 files to the playlist. If you try to add more, the message “MEM FULL” appears.

 - 3 To start memory playback, press the [ENTER] button. Memory playback starts.** Alternatively, you can start playback with the Play [\blacktriangleright] button.



■ To Change the Display

While creating a playlist for memory playback, you can press the [DISPLAY] button to change the display information as follows:



■ To Select Other Files During Memory Playback

Use the Previous and Next [\blacktriangleleft]/[\blacktriangleright] buttons.

■ To Check What’s on the Playlist

While playback is stopped, use the Fast Reverse and Fast Forward [\blacktriangleleft]/[\blacktriangleright] buttons to scroll through the playlist.


■ To Remove Files from the Playlist

- While memory playback is stopped, press the [CLEAR] button. Each press removes the last file from the playlist.
- The playlist is deleted when you change the playback mode (i.e., when you press the [MEMORY] button after stopping playback).

■ To Cancel Memory Playback

- Stop playback, then press the [MEMORY] button to change the playback mode. The MEMORY indicator disappears, and memory playback is cancelled.
- Memory playback is cancelled when the disc is ejected.


Memory Playback (For MP3/WMA CDs)

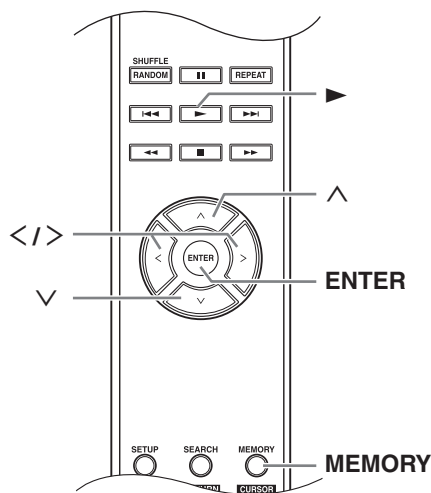

Memory Playback in Navigation Mode

Memory playback can be set only when playback is stopped.

 - 1 Press the [MEMORY] button; the MEMORY indicator appears.**



- 2 Press the [■] or [∨] button.** The CD Player enters Navigation mode and “ROOT” appears on the display.

- 3 Press the [ENTER] button.** The first folder name in ROOT appears on the display.

- 4 Use the [\langle]/[\rangle] buttons to select other folders and files at the same level.** Folders that don’t contain files or subfolders can’t be selected. Repeat steps 3 and 4 to select the files and subfolders in that folder.

- 5 Press the [ENTER] button.** The first item is memorized in the playlist.

6 Use the [^]/[<]/[>] buttons to continue selecting other items for memory playback.

To move up a level, press the [^] button.

To continue selecting items for memory playback, repeat steps 4 and 5.

To memorize other items of the same folder in the playlist, use the [<]/[>] buttons to select items, then press the [ENTER] button.

7 Press the Play [▶] button.

Memory playback starts.

Memory Playback in All Folder Mode

Memory playback can be set only when playback is stopped.

1 Press the [MEMORY] button; the MEMORY indicator appears.

2 Press the [II] or [^] button.

The CD Player enters All Folder mode and “1” appears on the display.

3 Use the [<]/[>] buttons to select the folder.

4 Press the [ENTER] button.

5 Use the [<]/[>] buttons to select the file.

6 Press the [ENTER] button.

The first file is memorized in the playlist.

7 Press the [^] button, then repeat steps 3 to 6.

 
To memorize other files of the same folder in the playlist, repeat steps 5 to 6.

8 Press the Play [▶] button.

Memory playback starts.


■ To Change the Display

While creating a playlist for memory playback, you can press the [DISPLAY] button to change the display information as follows:



Repeat Playback

In repeat playback, you can play an entire CD repeatedly, play one track repeatedly, or combine it with memory playback to play the playlist repeatedly, or random playback to play all of the tracks on the disc in random order repeatedly.

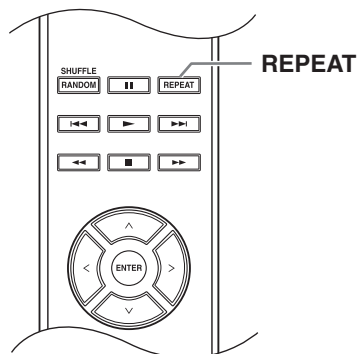

Press the [REPEAT] button; the “↻” or “↻1” indicator appears.

Repeat-1 playback can't be combined with memory playback or random playback.

■ To Cancel Repeat Playback

- Press the [REPEAT] button repeatedly until “REPEAT OFF” appears. (The ↻ indicator disappears.)
- Repeat playback is cancelled when the disc is ejected.


iPod / iPhone Playback

Before using your iPod/iPhone with the CD player, be sure to update your iPod/iPhone with the latest software, available from the Apple website.

If you leave your iPod/iPhone paused when using it on its own, eventually it will go into hibernation. If you connect it to the USB port in this state, you'll need to wait a few moments before your iPod/iPhone is ready for use.


Always remove your iPod/iPhone before moving the CD player.

Depending on your iPod/iPhone, or the type of content being played, some functions may not work as expected.

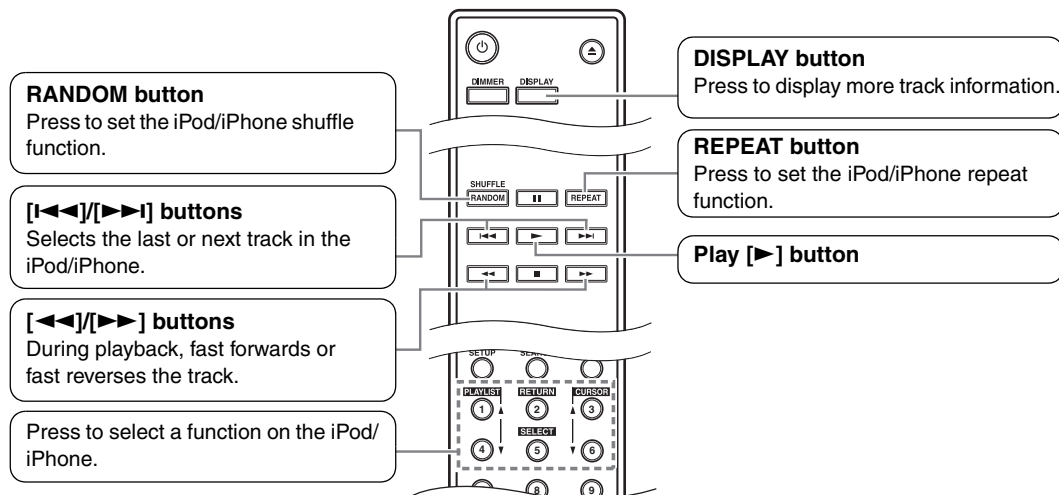

Playing iPod/iPhone

- 1 **Connect your iPod/iPhone to the USB connector on the front panel of the CD player using the USB cable.**

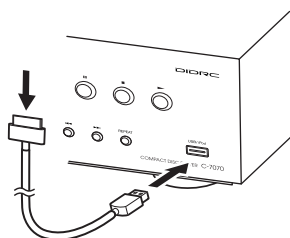

Note:

- Once you have connected the iPod/iPhone to the CD player, no sound will be heard through headphones connected to the [PHONES] jack on the CD player. Connect the headphones directly to the iPod/iPhone.

- 2 **Select "USB" using the [DISC/USB] button on the CD player.**

When no iPod/iPhone is connected, "No USB" will be displayed.

- 3 **To start playback, press the [▶] button.**

Playback will start with the top file in the folder structure.

To stop playback:

Press the [■] button.

To pause playback:

Press the [||] button. To resume playback, press the [▶] button again.



Notes:

- Make sure that no video content is being played.
- It will take about 15 seconds for the connection to be established.
- If the iPod/iPhone is connected while it is in the play mode, the iPod/iPhone playback might stop.
- During playback on the iPod nano or iPod (5th generation), "ONKYO" is displayed on the iPod display and the click wheel will be disabled. When the playback stops, the "ONKYO" disappears and the click wheel will be enabled.
- Adjusting the volume on your iPod/iPhone has no effect.
- In case you inadvertently move your iPod/iPhone volume control, make sure the volume level is not set too high before you reconnect your headphones.
- During playback, press the [DISPLAY] button repeatedly to display the following Track information.




USB Playback

This section explains how to play music files on a USB flash drive. Connect a USB flash drive as shown below.

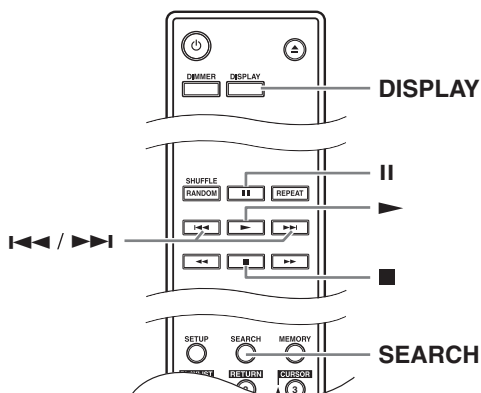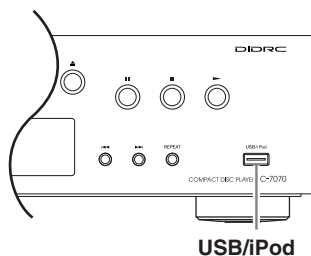

1 Insert your USB flash drive.

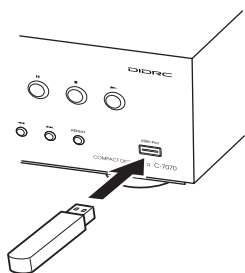

2 Select "USB" using the [DISC/USB] button on the CD player.

- When no USB flash drive is connected, "No USB" will appear.
- When there is no MP3, WMA or AAC file in the USB flash drive, "USB No File" will be displayed.

3 To start playback, press the Play [▶] button.

Playback will start with the top file in the folder structure (see page 18, File #1).


To stop playback:

Press the Stop [■] button.

To pause playback:

Press the Pause [II] button. The Pause indicator appears. To resume playback, press the Play [▶] button again.

Display during Stop

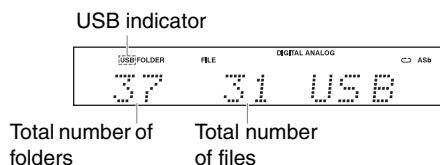

Note:

- When all music files of a USB flash drive have been played, playback will repeat from the top music file in the folder structure. The type of repeat playback can be selected.

Selecting Music Files

Press the [I◀◀] button repeatedly to select the previous file.

- While playback is stopped, pressing the [I◀◀] button will select the previous file.
- Press the [▶▶I] button repeatedly to select the next file.

Selecting Music Files in Other Folders

1. Press the [DISPLAY] button to display the current folder name.
2. To select the previous folder, press the [I◀◀] button. To select the next folder, press the [▶▶I] button.
3. Press the [DISPLAY] button to display the file name.
4. Use the [I◀◀] or [▶▶I] buttons to select a file.

Selecting a Folder during Playback (Search Mode)

This section explains how to select MP3/WMA folders.


1. Press the [SEARCH] button. The display blinks.
2. To select the previous folder, press the Previous [I◀◀] button. To select the next folder, press the Next [▶▶I] button.
3. Press the [SEARCH] button to display the file name.
4. Use the Previous [I◀◀] and Next [▶▶I] buttons to select a file.
5. Press the [▶] button.

Notes:

- See page 19 for “Selecting a Folder during Playback”.
- Do not connect the CD player’s USB port to a USB port on your computer. Music on your computer cannot be played through the receiver in this way.
- Operation with all USB flash drives including the ability to power them is not guaranteed.
- Do not connect your USB flash drive via a USB hub. The USB flash drive must be connected directly to the CD player’s USB port.
- If the USB flash drive contains a lot of data, the CD player may take a while to read it.

Random Playback

With random playback, all of the music files on the USB flash drive are played in random order.

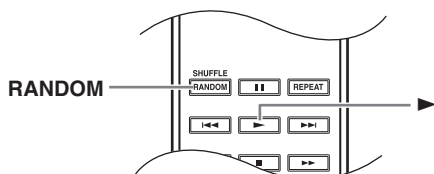


- 1 Press the [RANDOM] button.**
The RANDOM indicator appears.


- 2 To start random playback, press the [▶] button.**

Canceling Random Playback



 - To cancel random playback, press the [RANDOM] button. The RANDOM indicator disappears.
- Random playback is cancelled when the USB flash drive is removed or the stereo CD player is set to Standby.

Select the Type of Repeat Playback

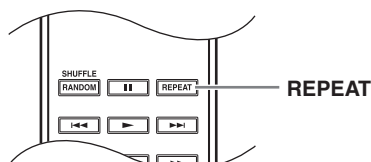When playing back USB flash drive music files, all files on the USB flash drive will be played according to repeat playback (the  indicator will already be shown). The type of Repeat playback can be selected.




Press the [REPEAT] button repeatedly to select the type of repeat playback.

- Repeat playback (default):  indicator appears.
- Repeat-1 playback: Repeats a single selected file.  1 indicator appears.

- 1-Folder Repeat Playback: Repeats files in Folder. 1 FOLDER indicator appears.

Displaying MP3/WMA/AAC Information

You can display various information about the MP3/WMA/AAC files currently playing, including ID3 tags such as title, artist name, and album name.

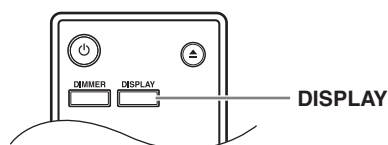

During playback, press the [DISPLAY] button repeatedly to display the following music file information.

 
Elapsed time: The length of time that the current MP3, WMA or AAC file has been playing (default display). When the elapsed time exceeds 99:59, the time count starts from 0:00.



File name: Name of the current file.




Folder name: Name of the current folder.




Title name: Title of the current file (if ID3 tag present).



 Artist name: Name of the artist (if ID3 tag present).



 Album name: Name of the album (if ID3 tag present).




While an MP3 file is playing, “MP3” will appear. While a WMA file is playing, “WMA” will appear. The file format will also be displayed when selecting a file.

Setup

Setup Procedure


The MP3/WMA preferences let you change the way MP3/WMA file information is displayed and the way MP3/WMA CDs are played.

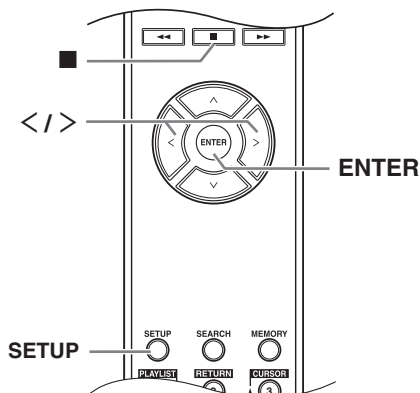

The MP3/WMA preferences can be set only when playback is stopped.

1 Press the [SETUP] button.

 2 Use the [</>] buttons to select the preference you want to change.



The preferences are explained in the next column.

3 Press the [ENTER] button.

4 Use the [</>] buttons to select the preference's options.

To cancel the procedure at any point, press the [■] button.

5 Press the [ENTER] button.

When the preference has been set, "COMPLETE" appears on the display.

Common Settings

Preferences

Below, the name of each preference is followed by its options in parentheses, with the default option in bold.

AUDIO

FILTER (Standard/Soft)

This preference selects the digital filter that is applied to the PCM data prior to D/A conversion for analog output; this will switch the response inside and outside the audible bandwidth.

Standard: Uncolored sound with good overall balance.

Soft: Mellow attack and richer resonance.

DIGITAL OUT (On/Off)

If you notice noise when using analog output, switching this preference "Off" to disable the digital output may reduce the noise.

If digital output is turned off, the DIGITAL indicator will not be shown.

ASb (On/Off)

Please refer to "Setting Auto Standby (ASb)" (page 15) for details of the procedure.

On the North American model:

The default setting is "Off".

On the European model:

The default setting is "On".

INITIAL

This initializes the settings to their factory-set state.

If you make the display indicate "Execute" and then press the [ENTER] button, the indication will change to "Clear" and the settings will be initialized.

If you decide not to initialize the settings, choose "Cancel" and press the [ENTER] button.

Setting MP3/WMA Preference

The following settings are used when playing back CDs that contain MP3/WMA files. These settings will not be shown if USB is selected. If you don't see these settings, press the [DISC/USB] button to switch to CD.

DISPLAY

DISC NAME (Display/Not)

This preference determines whether the disc name is displayed when an MP3/WMA disc is loaded.

FILE NAME (Scroll/Not)

This preference determines whether the file name scrolls across the display when an MP3/WMA file is selected.

FOLDER NAME (Scroll/Not)

This preference determines whether the folder name scrolls across the display when an MP3/WMA folder is selected.

In Navigation mode (see page 18), the folder name scrolls across the display regardless of this setting.

HIDE NUMBER (Disable/Enable)

This preference determines whether the numbers at the beginning of file and folder names are hidden.

When you create an MP3/WMA CD on a personal computer, you cannot normally determine the playback order of the files. However, if you number the MP3/WMA files in order, starting with 01, 02, 03, and so on, they will play in that order. If you don't want these numbers to appear on the display, choose Enable.

The following table shows a few examples of numbered file and folder names and how they will appear with the Disable and Enable options.

File/folder name	Disable	Enable
01 Pops	01 Pops	Pops
10-Rock	10-Rock	Rock
16_Jazz	16_Jazz	Jazz
21st Century	21st Century	21st Century
05-07-20 Album	05-07-20 Album	Album

BAD NAME (Replace/Not)

This preference determines whether file and folder names that contain undisplayable characters are replaced with "File n" or "Folder n," "n" being the file or folder number. When set to Not Replace, displayable characters are displayed and underscore characters are used in place of any undisplayable characters.

For ID3 tags, underscore characters are used in place of undisplayable characters regardless of this preference.

Note:

- File and folder names are scrolled in Navigation mode (page 18) regardless of the FILE NAME and FOLDER NAME preferences.

EXTRA

ID3 VER. 1 (Read/Not Read)

This preference determines whether version 1.0/1.1 tags are read and displayed. When set to Not Read, version 1.0/1.1 tags are not displayed.

ID3 VER. 2 (Read/Not Read)

This preference determines whether version 2.2/2.3/2.4 tags are read and displayed. When set to Not Read, version 2.2/2.3/2.4 ID3 tags are not displayed.

CD EXTRA (Audio/MP3)

This preference applies to CD Extra discs and determines whether music in the audio session or MP3/WMA files in the data session are played.

JOLIET (Use SVD/ISO9660)

This preference applies to MP3/WMA discs in Joliet format and determines whether the CD-Player reads the SVD data or treats the disc as an ISO 9660 disc. Normally, this preference doesn't need to be changed.

SVD (Supplementary Volume Descriptor) supports long file and folder names and characters other than letters and numbers. Some CD burning software refers to the Joliet format as "Windows format".

STOP KEY (All Folder/Navigation/Disable)


This preference determines how the Stop [■] button on the CD Player works.

When the All Folder option is selected, pressing the Stop[■] button once selects All Folder mode.

When the Navigation option is selected, pressing the Stop[■] button once selects Navigation mode.

When the Disable option is selected, the CD Player does not enter Navigation or All Folder mode when you press the Stop [■] button.

Setup Menu List

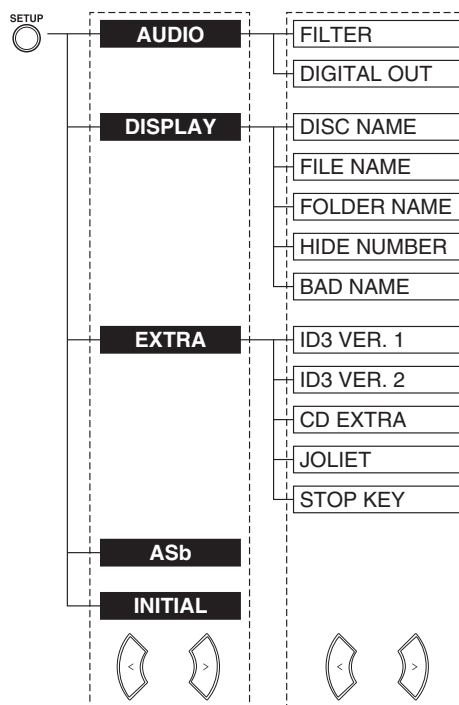

Troubleshooting

If you have any trouble using the CD Player, look for a solution in this section.

If you can't resolve the issue yourself, try resetting the CD Player before contacting your Onkyo dealer.

With the CD player stopped, press the [SETUP] button, then use the [◀/▶] buttons to make the display indicate "INITIAL", and press the [ENTER] button. Next, use the [◀/▶] buttons to make the display indicate "Execute", and press the [ENTER] button. When the display indicates "Clear", the player has been reset.

Note that resetting the CD Player will delete your custom settings.

Power

Can't turn on the C-7070.

- Make sure that the power cord is properly plugged into the wall outlet (page 14).
- Unplug the power cord from the wall outlet, wait five seconds or more, then plug it in again.

Audio

There's no sound.

- The C-7070 is not connected properly. Check all connections and correct as necessary.
- The wrong input source is selected on your amplifier. Check your amplifier's input source setting. Refer to your amplifier's manual.

CD

Can't play a CD.

- The disc is upside down. Load the disc with the label-side facing up (page 16).
- The disc is dirty. Remove the disc and clean it (page 12).
- Condensation has formed inside the C-7070. Unplug the power cord and leave the unit for two to three hours in the room temperature until the condensation has evaporated.
- The disc is nonstandard. See "Disc Notes" on page 11.

CD playback skips.

- Install the C-7070 in a location that is free of vibration.
- The disc is dirty. Remove the disc and clean it (page 12).
- The disc is very scratched. Replace the disc.

Can't enter track numbers for memory playback.

- No such track on the CD. Enter another number (page 22).

It takes a long time to locate certain tracks.

- The disc is dirty. Remove the disc and clean it (page 12).
- The disc is very scratched. Replace the disc.

SETUP

Can't access the SETUP menu.

- If any track has been selected even when the C-7070 is stopped, you must place it into the full stop state by pressing the [■] button before you can view all the SETUP menus. However, settings can be made while USB is selected and an iPod/iPhone or USB flash device is playing.

USB flash drive Playback

Can't access the music files on a USB flash drive.

- Make sure that the USB indicator light is on. If the light is not on, make sure that it is connected correctly and that the USB flash drive is one that is supported (page 25).
- The CD player supports USB flash drives that support the USB Flash Class. However, playback may not be possible with some USB flash drives even if they conform to the USB Flash Class.
- This CD player cannot recognize .WAV or .wav files.
- Check that the memory format is FAT16 or FAT32.
- USB flash drives with an internal USB hub are not supported.

Can't Play MP3/WMA/AAC Files.

- MP3/WMA/AAC files without a “.MP3/.WMA/.AAC” or “.mp3/.wma/.aac” filename extension are not recognized.

iPod/iPhone

There's No Sound.

- Make sure that the iPod/iPhone is connected correctly.
- Make sure that no video content is being played.
- Reset the iPod/iPhone.

Other

- The iPod/iPhone will not be charged while the CD player is in Standby mode.
- During playback on the iPod nano or iPod (5th generation), “ONKYO” is displayed on the iPod display and the click wheel is disabled.
- If “No USB” appears or if the display does not change from “USB Reading” or “iPod Reading”, try the following measures.
 - Disconnect the iPod/iPhone and try connecting it again.
 - Disconnect the iPod/iPhone, turn the CD player to the standby/off state and then on again, and then connect the iPod/iPhone again.
 - Disconnect the iPod/iPhone and reset it.

Remote Controller

The remote controller does not work.

- There are no batteries in the remote controller. Install new batteries (page 10).
- The batteries are expired. Replace with new batteries (page 10).
- The batteries are installed incorrectly. Check the batteries and correct as necessary (page 10).
- You're not pointing the remote controller at the C-7070's remote sensor. Point the remote controller at the C-7070's remote sensor (page 10).
- You're too far away from the C-7070. Move the remote controller closer to the C-7070 (page 10). The remote controller has a range of approximately 5 meters (16 ft.).
- A strong light source is interfering with the C-7070's remote sensor. Make sure that the C-7070 is not subjected to direct sunshine or inverter-type fluorescent lights. Relocate if necessary.
- If the C-7070 is installed in a cabinet with colored glass doors, the remote controller may not work reliably when the doors are closed. Open the doors, or use a cabinet without colored glass.

Onkyo is not responsible for damages (such as CD rental fees) due to unsuccessful recordings caused by malfunctions of the unit. Before you record important data, make sure that the material will be recorded correctly.

The C-7070 contains a microcomputer for signal processing and control functions. In very rare situations, severe interference, noise from an external source, or static electricity may cause it to lockup. In the unlikely event that this should happen, unplug the power cord, wait at least 10 seconds, and then plug it again.

Specifications

Frequency Response: 2 Hz – 20 kHz

Audio Dynamic Range: 100 dB

THD (Total Harmonic Distortion): 0.0025 %

Signal to Noise Ratio: 116 dB

Rated RCA Output Level and Impedance:

2.0 V (rms) / 400 Ω

Audio Output (Digital/Optical): –22.5 dBm

Audio Output/Impedance (Digital/Coaxial):

0.5 V p-p / 75 Ω

Operation Condition Temperature/Humidity:

5 °C–35 °C / 5 %–85 %

■ Audio Outputs

Digital Outputs: 1 (OPTICAL), 1 (COAXIAL)

Analog Outputs: 1

PHONES: 1 (ϕ 6.3 mm, 1/4 inch)

■ Others

RI: 2

USB: 1

Specifications and features are subject to change without notice.

Power Supply:

North American: AC 120 V, 60 Hz

European: AC 230 V, 50 Hz

Power Consumption:

North American: 26 W

European: 23 W

Stand-by Power Consumption:

North American: 0.15 W

European: 0.25 W

Dimensions (W × H × D): 435 × 101.1 × 306.2 mm
(17 1/8 × 4 × 12 1/16 inches)

Weight: 6.4 kg (14.2 lbs)

Disc Compatibility:* Audio CD, CD-R, CD-RW,
MP3/WMA (CD-R, CD-RW)

* Discs that have not been properly finalized may only be partially playable or not playable at all.

ONKYO®

ONKYO SOUND & VISION CORPORATION

2-1, Nisshin-cho, Neyagawa-shi, OSAKA 572-8540, JAPAN
Tel: 072-831-8023 Fax: 072-831-8163
<http://www.onkyo.com/>

ONKYO U.S.A. CORPORATION

18 Park Way, Upper Saddle River, N.J. 07458, U.S.A.
Tel: 800-229-1687, 201-785-2600 Fax: 201-785-2650
<http://www.us.onkyo.com/>

ONKYO EUROPE ELECTRONICS GmbH

Liegnitzerstrasse 6, 82194 Groebenzell, GERMANY
Tel: +49-8142-4401-0 Fax: +49-8142-4401-555
<http://www.eu.onkyo.com/>

ONKYO EUROPE ELECTRONICS GmbH (UK BRANCH)

The Coach House 81A High Street, Marlow, Buckinghamshire, SL7 1AB, UK
Tel: +44-(0)1628-473-350 Fax: +44-(0)1628-401-700

ONKYO CHINA LIMITED

Unit 1033, 10/F, Star House, No 3, Salisbury Road, Tsim Sha Tsui Kowloon, Hong Kong.
Tel: 852-2429-3118 Fax: 852-2428-9039
<http://www.ch.onkyo.com/>

ONKYO CHINA PRC

1301, 555 Tower, No.555 West NanJin Road, Jin an, Shanghai,
China 200041, Tel: 86-21-52131366 Fax: 86-21-52130396

SN 29400826

(C) Copyright 2011 ONKYO SOUND & VISION CORPORATION Japan. All rights reserved.

I1108-1



* 2 9 4 0 0 8 2 6 *